


PHONE: 952.927.9215 FAX: 952.927.9224

EMAIL: sales@synecosystems.com WEB: www.synecosystems.com

## INSTALLATION & OPERATION OF THE PEACEMAKER® OXIDIZING DRY AIR SCRUBBERS –(All Models)

Step 1.	Do not remove the PEACEMAKER <sup>®</sup> from the pallet. Place the entire assembly on a firm base.
Step 2.	Remove and save the cap from the foul-air intake. Install gate valve/blast gate if required, and connect into malodor source.
Step 3.	Connect exhaust stack. (If scrubber is in an enclosed building, continue stack through wall or roof.)
Step 4.	Install blower and connect it to the electrical power according to specifications and your local regulations. Switch on.
Step 5.	Remove/save the plug from the condensate line and install a drain line.

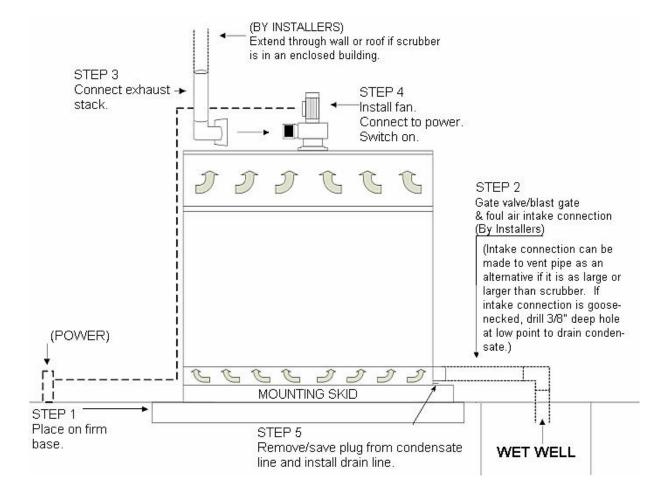



PHONE: 952.927.9215 FAX: 952.927.9224

EMAIL: sales@synecosystems.com WEB: www.synecosystems.com

DISCONNECT & RETURN	
Step 1.	Disconnect the power supply.
	Disconnect the PVC pipes leading to the scrubber and reinstall the intake cap and condensate plug that were removed during installation.
Step 3.	To arrange for pick-up, call Syneco Systems, Inc. at 952-927-9215.